


CP650 INSTALLATION WIRING INPUT AND CONTROL CONNECTIONS

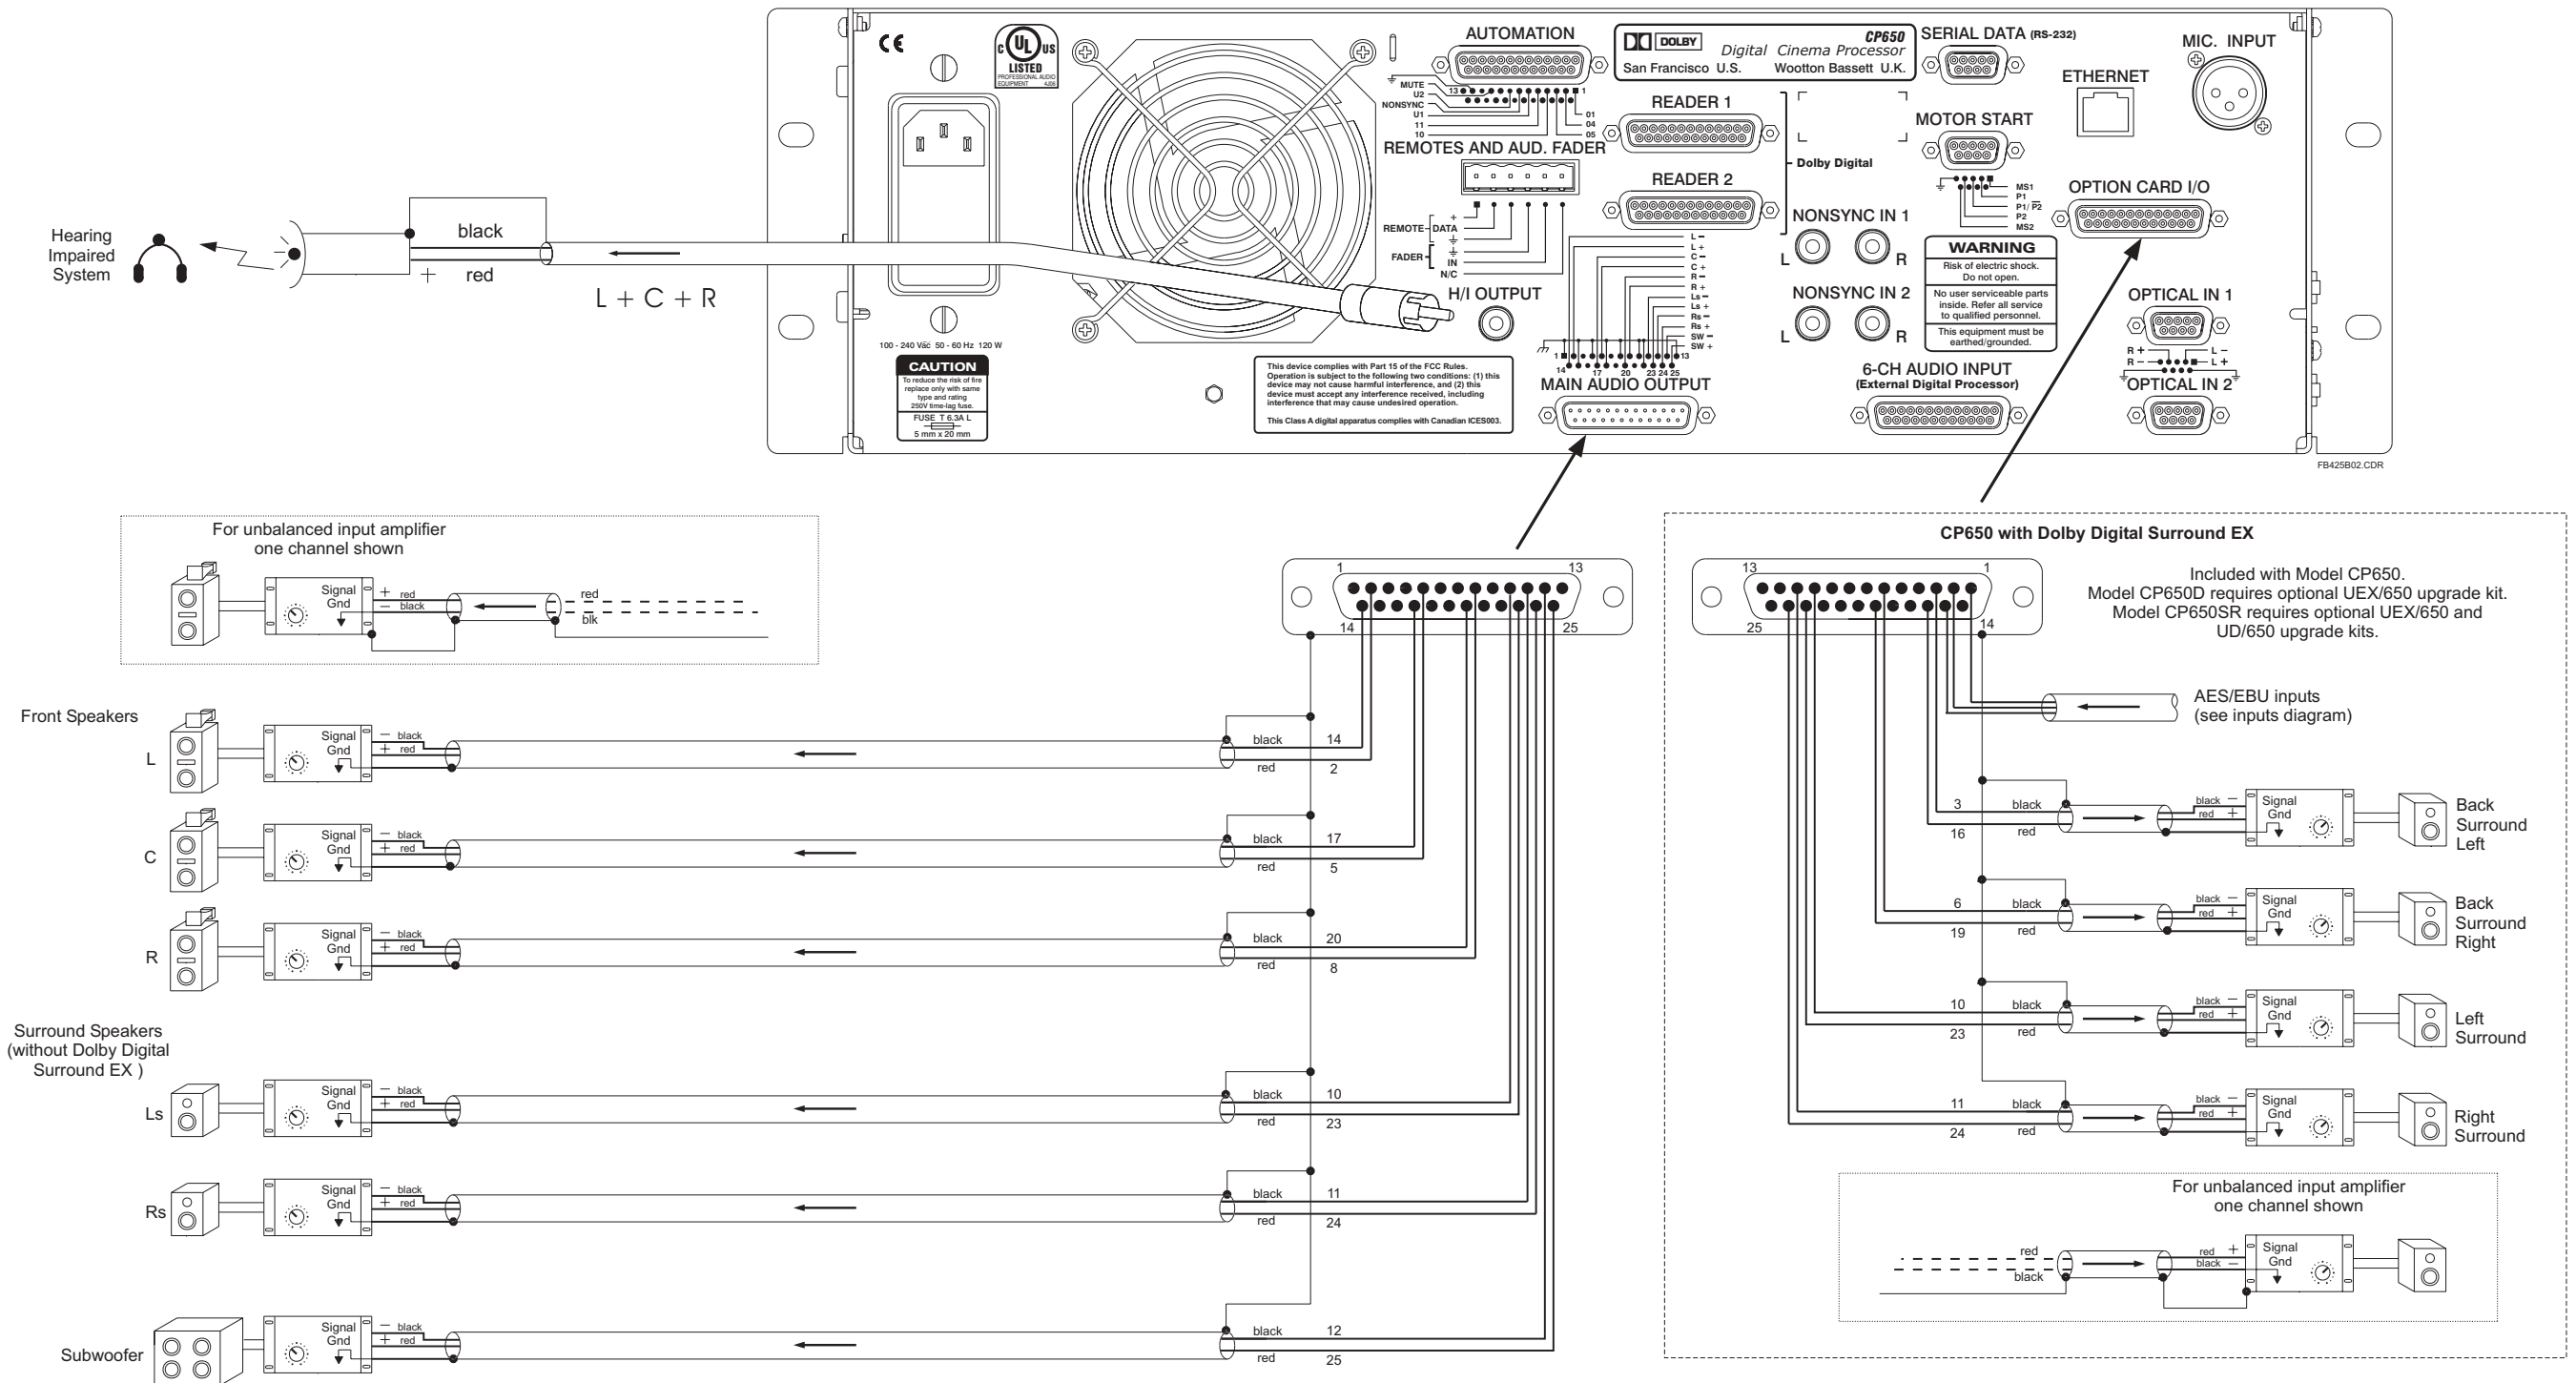

Notes:

1. Follow all local electrical and building codes.
2. Use grounded (earthed) conduit wherever possible. Avoid routing signal wiring near electric motors, rectifiers, power wiring, dimmer wiring, or other sources of electrical noise.
3. For two conductor with shield wiring, use Belden 8451 2-conductor shielded cable or equivalent: tinned copper, twisted pair, 22 AWG stranded tinned copper drain wire, aluminum-polyester shield, 100% shield coverage, conductor-to-conductor 111pF per meter.
4. All shields must be connected to the CHASSIS of the CP650. This achieves the required RF interference immunity. A metal housing must be used for all D-connectors and the shields must be connected to the housing. Chassis ground and circuit (audio) ground are internally connected.

CP650 INSTALLATION WIRING  
AUDIO OUTPUT CONNECTIONS